
## Remote I/O R1M Series

# THERMOCOUPLE & DC INPUT MODULE

(8 points, isolated)

#### **Functions & Features**

- 8-point thermocouple or DC inputs
- Complete channel-to-channel isolation
- Trigger input and alarm contact output
- Filtering protection against 50/60 Hz noise
- Modbus RS-485 and RS-232-C interface
- Easy system expansion via Modbus RTU

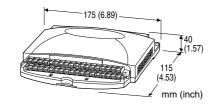

**MODEL: R1MS-GH3T-[1]** 

## **ORDERING INFORMATION**

• Code number: R1MS-GH3T-[1] Specify a code from below for [1]

e.g. R1MS-GH3T-M2

#### FIELD TERMINAL TYPE

T: M3 screw terminals

## [1] POWER INPUT

## **AC Power**

**M2**: 100 – 240 V AC (Operational voltage range 85 – 264 V,

47 - 66 Hz) **DC Power** 

**R**: 24 V DC

(Operational voltage range 24 V ±10 %, ripple 10 %p-p max.)

# **RELATED PRODUCTS**

- Resistor module (model: REM3-250)
- R1X configurator software (model: R1CON)

Downloadable at M-System's web site.

A dedicated cable is required to connect the module to the PC. Please refer to the internet software download site or the users manual for the PC configurator for applicable cable types.

# **GENERAL SPECIFICATIONS**

Connection

**Power input, transmission**: Euro type connector terminal (wire size 0.14 – 1.5 mm<sup>2</sup> or AWG26 – 16 for both stranded and solid wires)

**RS-232-C**: 9-pin D-sub connector (male, lock screw No. 4-40 UNC)

I/O: M3 screw terminals (torque 0.6 N·m)
PC Configurator: Miniature jack, RS-232-C level

**Isolation**: Input 1 to input 2 to input 3 to input 4 to input 5 to input 6 to input 7 to input 8 to trigger input to alarm output to RS-232-C or RS-485 or configurator jack to power to FG **Burnout**: Upscale, downscale or no burnout selectable with the operating mode setting rotary switch (default: No). Set to 'No Burnout' when other devices are connected in parallel to the R1MS.

**Operating mode setting**: Rotary switch; burnout type and line noise frequency setting

Line noise filtering: Specifying line frequency to 50 Hz or 60 Hz in order to increase normal mode noise rejection ratio. (default: 50/60 Hz for use with both frequencies)

Node address setting: Rotary switch; 1 - F (15 nodes)

RUN indicator LED: Green light blinks in normal conditions.

#### COMMUNICATION

Baud rate: 38.4 kbps

Communication: Half-duplex, asynchronous, no procedure

Protocol: Modbus RTU

Refer to Modbus Protocol Reference Guide (EM-5650) for supported functions.

■ RS-232-C

**Standard**: Conforms to RS-232-C, EIA **Transmission distance**: 10 meters max.

■ RS-485

Standard: Conforms to RS-485, EIA Transmission distance: 500 meters max.

Transmission media: Shielded twisted-pair cable (CPEV-S

0.9 dia.)

## **INPUT SPECIFICATIONS**

**Input**: Thermocouple or DC input within ±10 V, 8 points

Input resistance

**Thermocouple**:  $\geq 1 \text{ M}\Omega$  when powered;

 $\geq$  200 k $\Omega$  when not powered **DC**:  $\geq$  800 k $\Omega$  when powered;  $\geq$  700 k $\Omega$  when not powered

Thermocouple types: PR, K, E, J, T, B, R, S, C, N, U, L, P

Sampling rate: 50 millisec./8 points

• **Trigger input**: Dry contact; ON detected at ≤ 1.5 V

Sensing: Approx. 3 V DC @ 0.8 mA

• Burnout detecting: ≤ 45 nA for upscale or downscale;



幸託有限公司 XIN TOP CORPORATION

TEL: (02)2598-1199 E-mail: info@xintop.com

≤ 5 nA with no burnout (when measuring 0°C)

**Burnout response**: ≤ 10 seconds

## **OUTPUT SPECIFICATIONS**

■ Alarm Output: Photo MOSFET relay (no polarity);  $\leq 50 \Omega$  at ON,  $\geq 1 M\Omega$  at OFF; OFF when not powered

Peak load voltage: 50 V max.

Continuous load current: 50 mA max. Peak load current: 300 mA max. (≤0.1 sec.)

#### INSTALLATION

Power consumption

•AC: Approx. 9 VA
•DC: Approx. 3.5 W

Operating temperature: -5 to +60°C (23 to 140°F)
Operating humidity: 30 to 90 %RH (non-condensing)

**Mounting**: Surface or DIN rail **Weight**: 450 g (0.99 lbs)

# **PERFORMANCE** (% of measuring range)

Accuracy

**DC input**: ±0.05 % (±10 mV)

Thermocouple input: See the table below. Cold junction compensation error: (°C)

 $\leq \pm (1.0 + [Ambient Temp. - 20] \times 0.04)$  in stable ambient

temperature (e.g. ±1.4°C at 10°C and 30°C)

Sudden ambient temperature change affects the cold junction compensation. Be sure to place the R1MS in stable

Temp. coefficient:  $\leq$  (Accuracy / 4) / °C (e.g. DC:  $\pm 0.0125$  %/°C or  $\pm 2.5$  mV/°C, TC:  $\pm 12.5$   $\mu$ V/°C,  $\pm 0.2$ °C/°C with type E)

Response time: Approx. 0.55 sec. (0 - 90 %)

Insulation resistance:  $\ge 100$  M $\Omega$  with 500 V DC Dielectric strength: 1500 V AC @ 1 minute

(input 1 to input 2 to input 3 to input 4 to input 5 to input 6 to input 7 to input 8 to trigger input to alarm output to RS-

232-C or RS-485 or configurator jack)

2000 V AC @ 1 minute (input or alarm output or RS-232-C or

RS-485 or configurator jack to power to FG)

Normal mode noise rejection:  $\geq$  85 dB (50/60 Hz) with the filtering set to a specific frequency;  $\geq$  35 dB with 50/60 Hz

setting

Common mode noise rejection: ≥ 120 dB (50/60 Hz)


Accuracy (T/C)

T/C	USABLE RANGE (°C)	CONFORMANCE RANGE (°C)	ACCURACY (°C)
(PR)	0 to 1770	400 to 1770	±4.6
K(CA)	-270 to +1370	0 to 1370	±1.5
E (CRC)	-270 to +1000	0 to 1000	±0.8
J (IC)	-210 to +1200	0 to 1200	±1.0
T (CC)	-270 to +400	0 to 400	±1.3
B (RH)	100 to 1820	700 to 1820	±7.2
R	-50 to +1760	400 to 1760	±4.8
S	-50 to +1760	400 to 1760	±5.3
C (WRe 5-26)	0 to 2320	0 to 2320	±4.9
N	-270 to +1300	0 to 1300	±1.9
U	-200 to +600	0 to 600	±1.3
$\mathbf{L}$	-200 to +900	0 to 900	±1.0
P (Platinel II)	0 to 1395	0 to 1395	±1.7
T/C	USABLE RANGE (°F)	CONFORMANCE RANGE (°F)	ACCURACY (°F)
T/C (PR)			
	RANGE (°F)	RANGE (°F)	(°F)
(PR)	RANGE (°F) 32 to 3218	RANGE (°F) 752 to 3218	(°F) ±8.28
(PR) K (CA) E (CRC) J (IC)	RANGE (°F) 32 to 3218 -454 to +2498	RANGE (°F) 752 to 3218 32 to 2498	(°F) ±8.28 ±2.7
(PR) K (CA) E (CRC)	RANGE (°F) 32 to 3218 -454 to +2498 -454 to +1832	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832	(°F) ±8.28 ±2.7 ±1.44
(PR) K (CA) E (CRC) J (IC)	RANGE (°F)  32 to 3218  -454 to +2498  -454 to +1832  -346 to +2192	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192	(°F) ±8.28 ±2.7 ±1.44 ±1.8
(PR) K (CA) E (CRC) J (IC) T (CC)	RANGE (°F)  32 to 3218  -454 to +2498  -454 to +1832  -346 to +2192  -454 to +752	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34
(PR) K (CA) E (CRC)  J (IC) T (CC) B (RH)	RANGE (°F) 32 to 3218 -454 to +2498 -454 to +1832 -346 to +2192 -454 to +752 212 to 3308	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752 1292 to 3308	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34 ±13.0
(PR) K (CA) E (CRC)  J (IC) T (CC) B (RH) R	RANGE (°F)  32 to 3218  -454 to +2498  -454 to +1832  -346 to +2192  -454 to +752  212 to 3308  -58 to +3200	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752 1292 to 3308 752 to 3200	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34 ±13.0 ±8.64
(PR) K (CA) E (CRC)  J (IC) T (CC) B (RH)  R S	RANGE (°F)  32 to 3218  -454 to +2498  -454 to +1832  -346 to +2192  -454 to +752  212 to 3308  -58 to +3200  -58 to +3200	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752 1292 to 3308 752 to 3200 752 to 3200	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34 ±13.0 ±8.64 ±9.54
(PR) K (CA) E (CRC) J (IC) T (CC) B (RH) R S C (WRe 5-26)	RANGE (°F) 32 to 3218 -454 to +2498 -454 to +1832 -346 to +2192 -454 to +752 212 to 3308 -58 to +3200 -58 to +3200 32 to 4208	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752 1292 to 3308 752 to 3200 752 to 3200 32 to 4208	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34 ±13.0 ±8.64 ±9.54 ±8.82
(PR) K (CA) E (CRC) J (IC) T (CC) B (RH) R S C (WRe 5-26) N	RANGE (°F)  32 to 3218  -454 to +2498  -454 to +1832  -346 to +2192  -454 to +752  212 to 3308  -58 to +3200  -58 to +3200  32 to 4208  -454 to +2372	RANGE (°F) 752 to 3218 32 to 2498 32 to 1832 32 to 2192 32 to 752 1292 to 3308 752 to 3200 752 to 3200 32 to 4208 32 to 2372	(°F) ±8.28 ±2.7 ±1.44 ±1.8 ±2.34 ±13.0 ±8.64 ±9.54 ±8.82 ±3.42

Note 1: Measuring accuracy at  $50\mu V$  emf. Note 2: CJC error is not included.

TEL: (02)2598-1199 E-mail: info@xintop.com FAX: (02)2596-2331 Website: www.xintop.com

# **EXTERNAL VIEW**

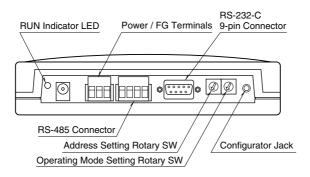


## **■ RS-232-C INTERFACE**

ABBR.	PIN NO.	EXPLANATION OF FUNCTION			
BA (SD)	2	Transmitted Data			
BB (RD)	3	Received Data			
AB (SG)	5	Signal Common			
CB (CS)	7	Clear to Send			
CA (RS)	8	Request to Send			
	1	Not Used.			
	4	DO NOT connect. Connecting may			
	6	cause malfunctions.			
	9				

幸託有限公司 XIN TOP CORPORATION 

# **COMMUNICATION CABLE CONNECTIONS**

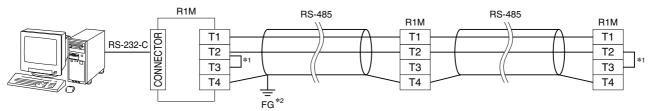


- \*1. Internal terminating resistor is used when the device is at the end of a transmission line.
- \*2. Install shielded cables to all sections and ground them at single point.

# **CONNECTION DIAGRAM**

Note: In order to improve EMC performance, bond the FG terminal to ground.

Caution: FG terminal is NOT a protective conductor terminal.

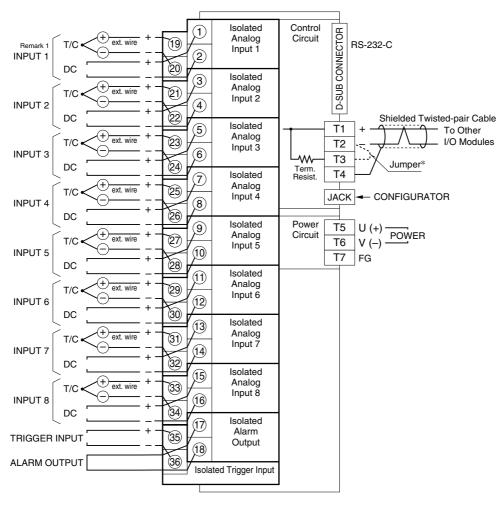

\* When the device is located at the end of a transmission line via twisted-pair cable, (when there is no cross-wiring), close across the terminal T2 – T3 with the attached jumper pin (or with a leadwire). When the device is not at the end, remove the jumper pin.

Note 1: Separate sets of terminals for DC and TC are assigned to each channel, however, DO NOT connect to both sets of terminals at once. Duplicate connection may affect measuring accuracies. DC and TC can be mixed among eight channels.

Note 2: Be careful to eliminate noise as much as possible by e.g. using shielded cables.

Note 3: Be sure to earth the FG terminal and the cable shielding to a most stable earth point in the environment

Note 4: Resistor modules (model: REM3-250) can be used to convert current inputs into voltage. However, use of REM3 is not recommended when TC inputs are mixed because the heat developed on and around the REM3 affects the cold junction compensation performance.



幸託有限公司 XIN TOP CORPORATION TEL: (02)2598-1199 E-mail: info@xintop.com

# **MODBUS COMMUNICATION**

## **■ COMMUNICATION PARAMETERS**

PARAMETER	SPECIFICATION
Data Mode	RTU
Baud Rate	9600 / 19200 / 38400 (*) bps
Parity	None / Odd (*) / Even
Bit Length	8
Stop Bit	1 (*) / 2
Node Address	1 (*) to 15
Floating Point Data	N/A
Interface	RS-232-C/ RS-485

<sup>(\*)</sup> Ex-factory setting

# **■ FUNCTION CODES & SUPPORTED CODES**

0005	NIANAE	Ť		
CODE	NAME			
01	Read Coil Status	X	Digital output from the slave	
02	Read Input Status	X	Status of digital inputs to the slave	
03	Read Holding Registers	X	General purpose register within the slave	
04	Read Input Registers	X	Collected data from the field by the slave	
05	Force Single Coil	X	Digital output from the slave	
06	Preset Single Registers	X	General purpose register within the slave	
07	Read Exception Status			
08	Diagnostics			
09	Program 484			
10	Poll 484			
11	Fetch Comm. Event Counter		Fetch a status word and an event counter	
12	Fetch Comm. Event Log		A status word, an event counter, a message count and a field of event bytes	
13	Program Controller			
14	Poll Controller			
15	Force Multiple Coils	X	Digital output from the slave	
16	Preset Multiple Registers	X	General purpose register within the slave	
17	Report Slave ID		Slave type / 'RUN' status	
18	Program 884/M84			
19	Reset Comm. Link			
20	Read General Reference			
21	Write General Reference			
22	Mask Write 4X Register			
23	Read/Write 4X Register			
24	Read FIFO Queue			

幸託有限公司 TEL: (02)2598-1199 E-mail: info@xintop.com


XIN TOP CORPORATION

■ DATA ADDRESS					
	ADDRESS	DATA FORMAT	NAME		
Coil (0X)	1 - 32	bit	DO: Alarm (Only Address 10001 is enabled.)		
	33 – 40	bit	Cold jur	nction compensation SW (0: Disable, 1: Enable) *1	
Input Status (1X)	1 - 32	bit	DI: Trig	ger contact input (Only Address 10001 is enabled.)	
	33 - 40	bit	ADC ov	errange	
Input Register (3X)	1 – 8	I	AI per c	hannel in engineering unit (DC: x 1000, TC: x 10)	
	17 - 32	F	AI per c	hannel in engineering unit	
	33 - 48	F	Calibrat	ted voltage value	
	49 - 64	F	Cold jur	nction temperature *2	
	65 - 72	F	Tempera	ature measured at Ch.1 thr. 4	
	81 – 88	I	Channe	l status	
	513	I	Bit	System Status	
			0 to 5	Reserved for system use	
			6	E <sup>2</sup> PROM diagnostics (0: Normal, 1: Error)	
			7	ADC error (0: Normal, 1: Error)	
			8 to 15	Reserved for system use	
	514 - 521	B16	Model No.		
	522 - 529	B16	Serial No.		
	530 - 537	B16	Hardware version No.		
	538 - 545	B16	Firmwa	re version No.	
Holding Register (4X)	49 - 50	F	Input filter time constant (seconds) *3		
	145 - 152	I	I/O type No.		
	514	I	Burnout	t type (0: No burnout, 1: Upscale, 2: Downscale) *1	
	515	I	Line noise filtering type (0: 50/60 Hz, 1: 50 Hz, 2: 60 Hz) *1		

bit = 1 bit, I = 16-bit integer, F = 32-bit floating, B16 = 16-byte character

#### **■ INPUT DATA**

• 32-bit Floating

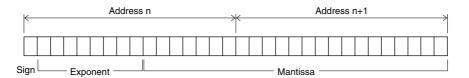

#### **■ INPUT REGISTERS DESCRIPTION**

## (1) ANALOG INPUT IN ENGINEERING UNIT (30017 to 30032)

Indicates analog input values in engineering unit for each channel (1-8). The unit is specific to each input type: °C for temperature, Volts for voltage. The data are 32-bit floating values, which requires two consecutive registers for one module.

#### (2) CHANNEL STATUS (30081 to 30088)

Indicates the current status of analog inputs (1-8). The following list shows the names and descriptions of each bit.

BIT	NAME	DESCRIPTION	
6	Input Overrange	Indicates the designated analog input is in overrange, defined as one or	
		more of the following condition:	
		• ADC input value 0X0000 or 0XFFFF	
		Burnout status for thermocouple input	
		• Out of range defined in the temperature table (thermocouple)	
		• ADC error	
		0 : Normal	
		1: Overrange	
7	ADC Error	Indicates the status of ADC.	
		0 : Normal	
		1: Error	
12	Cold Junction Compensation SW	Indicates whether the cold junction compensation is enabled or disabled, for	
		thermocouple input.	
		0: Disable	
		1: Enable	
Others	Reserved	For system's use	

TEL: (02)2598-1199 E-mail: info@xintop.com

XIN TOP CORPORATION FAX: (02)2596-2331 Website: www.xintop.com

<sup>\*1.</sup> Changeable only when the mode SW is set to 0 for R1MS-GH3.

<sup>\*2.</sup> Thermocouple input only.

<sup>\*3</sup>. Effective for large noise in the input signal. 0 sec. = No Filtering.

#### **■ INPUT REGISTERS DESCRIPTION**


Indicates I/O type for each channel. The data are 16-bit integer values.

MODEL	I/O	I/O TYPE	SELECTION	USABLE RANGE	NOTES
R1MS-GH3 R2M-2G3	DC input	0X00	-10 to 10 V	-10 to 10 V	
R1M-GH2	R1M-GH2 DC input	0X00	-20 to 20 V	-22.7 to 22.7 V	ATT SW ON
		0X01	-5 to 5 V	-5.6 to 5.6 V	ATT SW ON
		0X02	-1 to 1 V	-1.4 to 1.4 V	ATT SW ON
		0X03	-800 to 800 mV	-860 to 860 mV	
		0X04	-200 to 200 mV	-215 to 215 mV	
		0X05	-50 to 50 mV	-53 to 53 mV	
		0X06	-10 to 10 mV	-13.4 to 13.4 mV	
R1M-GH2	T/C input	0X10	(PR)	0 to 1770 °C	
R1MS-GH3		0X11	K (CA)	-270 to 1370 °C	
R2M-2H3		0X12	E (CRC)	-270 to 1000 °C	
		0X13	J (IC)	-210 to 1200 °C	
		0X14	T (CC)	-270 to 400 °C	
		0X15	B (RH)	100 to 1820 °C	
		0X16	R	-50 to 1760 °C	
		0X17	S	-50 to 1760 °C	
		0X18	C (WRe 5-26)	0 to 2320 °C	
		0X19	N	-270 to 1300 °C	
		0X1A	U	-200 to 600 °C	
		0X1B	L	-200 to 900 °C	
		0X1C	P (Platinel II)	0 to 1395 °C	
R1M-J3	RTD input	0X30	JPt 100 (JIS '89)	-200 to 500 °C	
	-	0X31	Pt 100 (JIS '89)	-200 to 660 °C	
		0X32	Pt 100 (JIS '97/IEC)	-200 to 850 °C	
		0X33	Pt 50Ω (JIS '81)	-200 to 649 °C	
		0X34	Ni 508.4Ω	-50 to 280 °C	
		0X35	Pt 1000	-200 to 850 °C	
	POT input	0X40	0 to 100 ohms	0 to 100 %	
	_	0X41	0 to 500 ohms	0 to 100 %	
		0X42	0 to 1k ohms	0 to 100 %	
		0X43	0 to 10k ohms	0 to 100 %	
R1M-D1	DO	0X60			
	DI				


幸託有限公司 TEL: (02)2598-1199 E-mail: info@xintop.com

XIN TOP CORPORATION FAX: (02)2596-2331 Website: www.xintop.com

# **EXTERNAL DIMENSIONS & TERMINAL ASSIGNMENTS unit: mm (inch)**

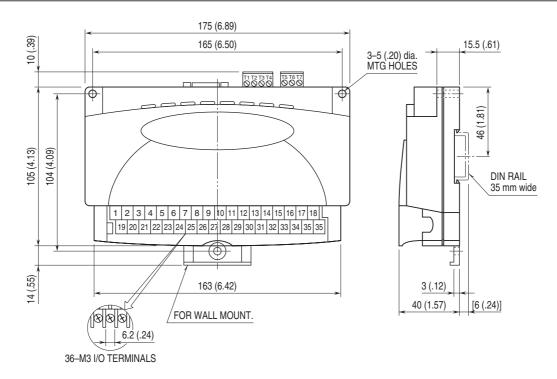

# SYSTEM CONFIGURATION EXAMPLES

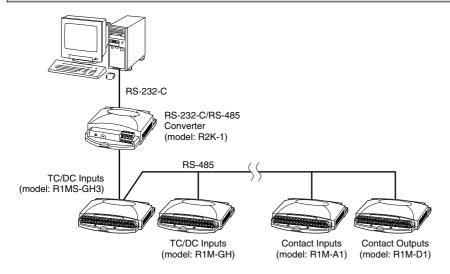

When the cable distance between the PC and the R1Ms is long, insert an RS-232-C/RS-485 Converter for isolation.



Specifications are subject to change without notice.

幸託有限公司 **XIN TOP CORPORATION**