MODFI: MDW5AIW


# **Lightning Surge Protectors for Electronics Equipment M-RESTER**

# LIGHTNING SURGE PROTECTOR FOR LonWorks

(life monitor)

## Functions & Features

- Designed specifically for the network
- Life monitor function helps you to decide when you should replace the surge protector
- LED and alarm contact output indicate the degradation and life span of the surge protection circuits
- Easy maintenance thanks to discharge elements installed on the ellement module
- No interruption of signal even unplugging head element
- DIN rail mounting

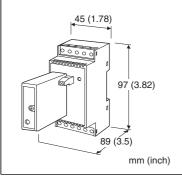

**HEAD ELEMENT** 

**MODEL: MDW5ALW-E** 

**BASE** 

**MODEL: MDW5ALW-B-[1]** 

## **ORDERING INFORMATION**

Order the both pieces of this surge protector (the head element and the base), respectively required for the use. Order the pieces by separate only for replacement.

Head element

Code number: MDW5ALW-E

• Base

Code number: MDW5ALW-B-[1] Specify a code from below for [1].

(e.g. MDW5ALW-B-R)

## [1] POWER INPUT

**AC Power** 

M2: 100 - 240 V AC (Operational voltage range 90 - 264 V,

47 - 66 Hz)

#### **DC Power**

R: 24 V DC

(Operational voltage range 24 V ±10 %, ripple 10 %p-p max.)

P: 110 V DC

(Operational voltage range 85 - 150 V, ripple 10 %p-p max.)

## APPLICABLE NETWORK

LonWorks FTT-10A network

This unit is not applicable to LonWorks Link Power network.

## **GENERAL SPECIFICATIONS**

Construction: Plug-in

Degree of protection: IP20 (If the solderless terminals are

covered with insulation tubes.) Surge protection type: Two-port SPD

Connection

• Transmission, power & grounding: M3 screw terminals

(torque 0.8 N·m)

• Alarm output: Euro Type Connector Terminal (torque 0.6 N·m)

Applicable wire size

Line, communication: See the 'External Dimensions.' Alarm output: 0.2 to 2.5 mm<sup>2</sup> (7 mm exposed)

Screw terminal

• Transmission, power & grounding: Nickel-plated steel

• Alarm output: Tin-plated copper alloy

Housing material: Flame-resistant resin (black)

Indicators

• ALM: Green/Amber/Red tricolor LED

OFF when no surge is detected.

Green ON when surge is detected more than once.

Amber ON when element life is about to expire.

(Prepare to replace)

Red ON when element life is expired or deteriorated or internal battery is drained. (Replace)

• PWR: Green LED

ON when power is supplyed.

OFF when the base power circuit is in error.

Degradation judged: When the leakage current at the

voltage limiter exceeds approx. 100 µA

Life time judged: When the number of discharges of the discharge element reaches the expected life span.

Alarm contact: Relay N.C contact

• Element error: ON when life span of the discharge element has expired, the voltage limiter is degraded, battery drain or element is removed.

• Base error: ON with power circuit error or power supply failure

Website: www.xintop.com

Rated load: 250 V AC @ 1 A ( $\cos \emptyset = 1$ )

30 V DC @ 1 A (resistive load)

FAX: (02)2596-2331

Maximum switching voltage: 264 V AC or 125 V DC

TEL: (02)2598-1199 E-mail: info@xintop.com



**MODEL: MDW5ALW** 

Maximum switching power: 250 VA or 30 W

Minimum load: 5 V DC @ 10 mA

**Battery**: Lithium battery built in the element, used for life time judgement. No recharge or replacement available.

Battery life: 10 years minumum

## **STANDARDS & APPROVALS**

Surge protection: IEC 61643-21: 2000

(Categories C1, C2)

## **INSTALLATION**

**Power consumption** 

•AC: Approx. 2 VA at 100 V Approx. 3 VA at 200 V Approx. 4 VA at 240 V

•DC: ≤ 2 W

Operating temperature: -10 to +55°C (14 to 131°F)
Operating humidity: 30 to 90 %RH (non-condensing)

Mounting: DIN rail Weight: 160 g (0.35 lbs)

## **PERFORMANCE**

Max. continuous operating voltage (Uc):

Line to line: ±1.5 V min Line to earth: ±100 V min SHLD to earth: ±160 V min Voltage protection level (Up):

@ 4 kV (1.2/50 μsec.)
Line to line: ±30 V max.
Line to earth: ±370 V max.
SHLD to earth: ±800 V max.

Response time:

Line to line:  $\leq$  4 nsec.

Line or SHLD to earth:  $\leq$  20 nsec.

Leakage current

(@ max. continuous operating voltage)

Line to line:  $\leq 50 \mu A$ Line to earth:  $\leq 20 \mu A$ SHLD to earth:  $\leq 5 \mu A$ 

Max. discharge current (Imax): 10 kA (8/20  $\mu sec.$ ), 1.0 kA

 $(10/350 \mu A)$ 

Nominal current (I<sub>N</sub>): 100 mA

Insulation resistance:  $\geq 100 \text{ M}\Omega$  with 500 V DC (surge protector circuit to alarm contact to power)

Dielectric strength: 2000 V AC @ 1 minute

(surge protector circuit to alarm contact to power) Internal series resistance:  $\leq 3.8 \Omega$  (including return)


 $\leq$  4.2  $\Omega$  (for only base, including return) AC durability: 1 Arms (60 Hz 1 sec.) 5 times

Capacitance @ 1 MHz: Line to line: Approx. 100 pF Line to earth: Approx. 100 pF SHLD to earth: Approx. 100 pF


幸託有限公司 XIN TOP CORPORATION

MODEL: MDW5ALW

# **EXTERNAL VIEW**

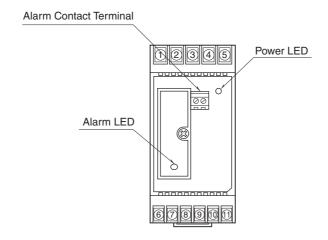

# **EXTERNAL DIMENSIONS & TERMINAL ASSIGNMENTS unit: mm (inch)**

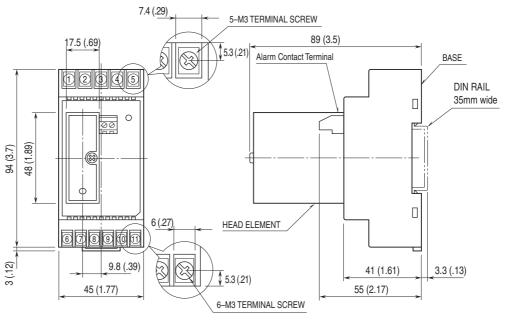


• When mounting, no extra space is needed between units.

幸託有限公司 TEL: (02)2598-1199 E-mail: info@xintop.com XIN TOP CORPORATION FAX: (02)2596-2331 Website: www.xintop.com

**MODEL: MDW5ALW** 

# **SCHEMATIC CIRCUITRY & CONNECTION DIAGRAM**

#### **■** CONNECTION DIAGRAM

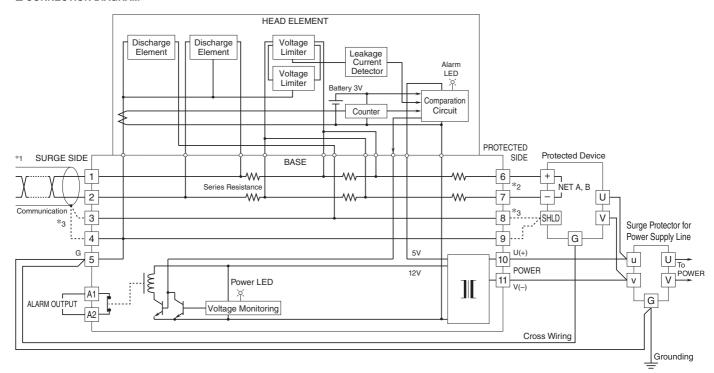


- \*1. Be sure to use twisted-pair cables.
- \*2. No polarity.
- \*3. With shielded twisted-pair cables, connect the shield of the cable to the '3' terminal of the M-Rester for floating, and with the '4' terminal for grounding. Follow instructions provided with the protected device whether '8' and '9' terminals should be connected or not.

However, if the shield terminal of the protected device is not isolated from NET A / B, DO NOT connect '8' and '9' terminals to the protected device.

幸託有限公司 XIN TOP CORPORATION TEL: (02)2598-1199 E-mail: info@xintop.com

FAX: (02)2596-2331 Website: www.xintop.com

#### **■ NETWORK CONFIGURATION**

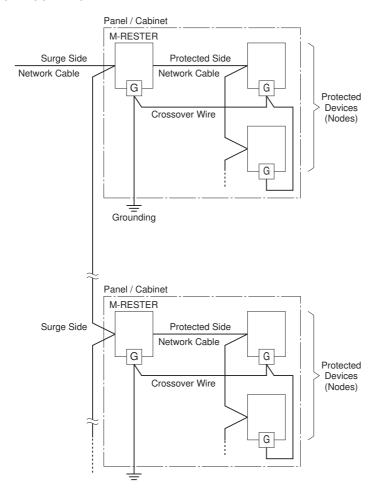

- The M-RESTER is applicable to networks which consist only of FTT-10A.
   Not applicable to the ones connected to Link Power network.
- The maximum number of nodes connectable to the network segment is reduced by one when one unit of M-RESTER is added.
- When the distance between nodes are relatively long (e.g. grouped and separated by cabinets), install the M-RESTER by each group of devices. Insert the M-RESTER at the surge side of the network.
- For detailed information on the network, refer to LonWorks FTT-10A Free Topology Transceiver User's Guide provided by Echelon.



Specifications are subject to change without notice.

幸託有限公司 TEL: (02)2598-1199 E-mail: info@xintop.com

XIN TOP CORPORATION FAX: (02)2596-2331 Website: www.xintop.com