Remote I/O R6 Series

CC-Link INTERFACE MODULE


(CC-Link Ver.1.10; for 16-point analog signals)

Functions & Features

- Free combination of analog and discrete I/O
- Direct sensor inputs
- · Space-saving
- · Low power consumption

Typical Applications

• Remote I/O for DCS and PLC

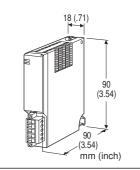

MODEL: R6-NC1

ORDERING INFORMATION

• Code number: R6-NC1

PACKAGE INCLUDES...

• Terminating resistor (110 Ω, 0.25 W)

GENERAL SPECIFICATIONS

Connection

Network: Euro type connector terminal

Internal bus: Via the Installation Base (model: R6x-BS)

Power supply: Via the Installation Base (model: R6x-BS)

Max. number of I/O modules: 16 (analog 16 points)

Isolation: CC-Link to internal bus or internal power

RUN indicator: Bi-color (green/red) LED; green in normal communications; red when receiving (Function selected

with DIP SW3)

ERR indicator: Bi-color (green/red) LED; the green ON/ blinks in communication errors; red when transmitting (Function

selected with DIP SW3)

Data allocation: 1 or 2 set with the side DIP switch

CC-Link COMMUNICATION

Protocol: CC-Link V1.10

Device type: Remote device station

Required node: 4 (RX, RY: 32 bit, RWw, RWr: 16 words)

Network cable: CC-Link cable

Station address setting: Rotary switch; 1 - 64

Baud rate setting: Rotary switch

156kbps, 625kbps, 2.5Mbps, 5Mbps, 10Mbps

INSTALLATION

Operating temperature: -10 to +55°C (14 to 131°F)
Operating humidity: 30 to 90 %RH (non-condensing)

Atmosphere: No corrosive gas or heavy dust **Mounting**: Installation Base (model: R6x-BS)

Weight: 100 g (3.53 oz)


PERFORMANCE

Insulation resistance: $\geq 100 \text{ M}\Omega$ with 500 V DC Dielectric strength: 2000 V AC @ 1 minute (CC-Link to


FAX: (02)2596-2331 Website: www.xintop.com

internal bus or internal power)

EXTERNAL VIEW

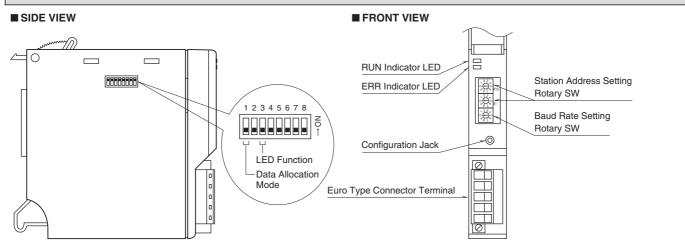

COMMUNICATION CABLE CONNECTIONS

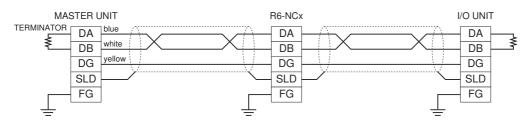

幸託有限公司 **XIN TOP CORPORATION**

FAX: (02)2596-2331 Website: www.xintop.com

TRANSMISSION DATA DESCRIPTIONS

The DIP SW located at the side of the module switches the unit's data allocation mode.

In the Data Allocation Mode 1, one (1) word is assigned per module. The second channel of analog I/O modules cannot be used. Max. 16 I/O modules can be connected in this mode.

In the Data Allocation Mode 2, two (2) words are assigned per module regardless of whether the second word area is required or not, even for discrete I/O modules that require one (1) word.

Max. 8 I/O modules can be connected in this mode.

■ DATA ALLOCATION MODE 1

Output Data

The figure below shows the allocation of data sent from the network module to the master.

Module RWr n+0 0 2 +2 3 +4 5 6 +6 7 +8 8 9 +10 10 11 12 +12 13 +14 14 15

Input Data

The figure below shows the allocation of data sent from the master to the network module.

	Module Address	15	_			<u> </u>				0
RWw n+0	0	Ш								Щ
	1									
+2	2									
	3									
+4	4									
	5									
+6	6									
	7									
+8	8									
	9									
+10	10									
	11									
+12	12									
	13									
+14	14									
	15									

TEL: (02)2598-1199 E-mail: info@xintop.com

FAX: (02)2596-2331 Website: www.xintop.com

Each module takes one-word areas for input and output respectively, regardless of whether the module type is input or output. If a module for Data Allocation Mode 2 is used, the second channel data is invalid.

Field input data is set in the module's output data area. The input data area is also secured though not used for an input module.

• RX(n+0)0 through RX(n+0)F

RX(n+0)0 through RX(n+0)F show the I/O module's data error.

- Input overrange (\leq -15% or \geq +115%) of Input modules except R6x-TSx and -RSx.
- Inputs of R6x-TSx, -RSx burnout.
- Output wire breakdown of R6x-YSx (Firmware Version 2.00 or later). *

In the above case, the corresponded bit is "1."

Also the corresponded bit for unmounted channels is "1."

 RX(n+0) 0
 Module address 0

 RX(n+0) 1
 Module address 1

 RX(n+0) 2
 Module address 2

 RX(n+0) 3
 Module address 3

 :
 :

 :
 :

 RX(n+0) E
 Module address 14

 RX(n+0) F
 Module address 15

• RX(n+1)0 through RX(n+1)F

RX(n+1)0 through RX(n+1)T are reserved for future use. RX(n+1)8 through RX(n+1)A and RX(n+1)C through RX(n+1)F are not used, while RX(n+1)B is assigned to Ready signal, which is turned to "1" when the network module is in normal conditions.

* R6-NC1 is compatible with Firmware version 1.02 or later.



■ DATA ALLOCATION MODE 2

Output Data

The figure below shows the allocation of data sent from the network module to the master.

	Module Address	15	0
RWr n+0	0_CH1		
	0_CH2		
+2	1_CH1		
	1_CH2		
+4	2_CH1		
	2_CH2		
+6	3_CH1		
	3_CH2		
+8	4_CH1		
	4_CH2		
+10	5_CH1		
	5_CH2		
+12	6_CH1		
	6_CH2		
+14	7_CH1		
	7_CH2		

Input Data

The figure below shows the allocation of data sent from the master to the network module.

RWw n+0	Module Address 0_CH1 0_CH2	15 0
+2		
	1_CH2	
+4	2_CH1	
	2_CH2	
+6	3_CH1	
	3_CH2	
+8	4_CH1	
	4_CH2	
+10	5_CH1	
	5_CH2	
+12	6_CH1	
	6_CH2	
+14	7_CH1	
	7_CH2	

FAX: (02)2596-2331 Website: www.xintop.com

Each module takes two-word areas for input and output respectively, regardless of whether the module type is input or output. If a module for Data Allocation Mode 1 is used, all the bits for the second channel data turn to "0" (unused). Field input data is set at the module's output data area. The input data area is also secured though not used for an input module.

• RX(n+0)0 through RX(n+0)F

RX(n+0)0 through RX(n+0)F show the I/O module's data error.

- Input overrange (≤-15% or ≥+115%) of Input modules except R6x-TSx and -RSx.
- Inputs of R6x-TSx, -RSx burnout.
- Output wire breakdown of R6x-YSx (Firmware Version 2.00 or later). *

In the above case, the corresponded bit is "1."

The allocation using R6-NC1 with modules all of which data allocation is "2" is shown below.

RX(n+0) 0 Module address 0, I/O 1 RX(n+0) 1 Module address 0, I/O 2 RX(n+0) 2 Module address 1, I/O 1 RX(n+0) 3 Module address 1, I/O 2 RX(n+0) E Module address 7, I/O 1 RX(n+0) F Module address 7, I/O 2

• RX(n+1)0 through RX(n+1)F

RX(n+1)0 through RX(n+1)7 are reserved for future use. RX(n+1)8 through RX(n+1)A and RX(n+1)C through RX(n+1)F are not used, while RX(n+1)B is assigned to Ready signal, which is turned to "1" when the network module is in normal conditions.

* R6-NC1 is compatible with Firmware version 1.02 or later.

MODEL: R6-NC1

I/O DATA DESCRIPTIONS

■ 16-BIT ANALOG DATA

0 to 100% of the selected I/O range is converted into 0 to 10000 (binary).


With °C or Kelvin temperature unit, raw data is multiplied by 10. For example, 25.5°C is converted into 255.

With °F temperature unit, the integer section of raw data is directly converted into the data. For example, 135.4°F is converted into 135.

Negative values are represented in 2's complements.




■ DISCRETE DATA

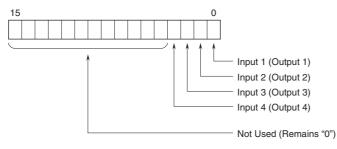


0: OFF 1 : ON

DIMENSIONS unit: mm (inch)

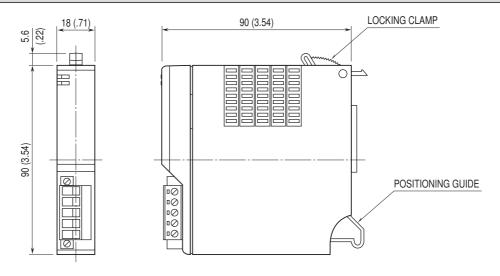

SCHEMATIC CIRCUITRY & CONNECTION DIAGRAM

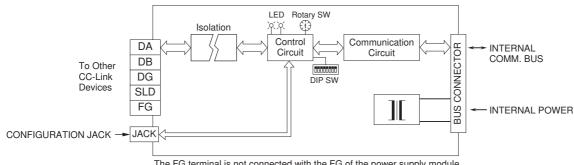

The FG terminal is not connected with the FG of the power supply module.

FAX: (02)2596-2331 Website: www.xintop.com

E-mail: info@xintop.com

Website: www.xintop.com

Specifications are subject to change without notice.