

## Final Control Elements

### MINI-TOP ELECTRONIC ACTUATOR


(linear type; DeviceNet)

#### Functions & Features

- Small-size control valve actuator
- Direct connection to DeviceNet capable PLC and other devices on the same network
- Easy wired
- Remote configuration via DeviceNet
- Uploading device information via DeviceNet for maintenance purpose
- 1/1000 high resolution

#### Typical Applications

- Small-diameter control valve used in food related plants or in co-generation systems
- Air-conditioning in buildings or plants
- Micro-flow control for pharmaceutical injection

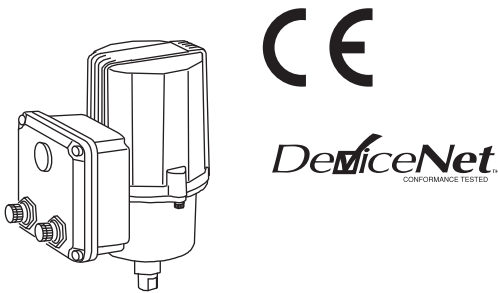

### MODEL: MSP4D-[1][2][3]-[4]R

#### ORDERING INFORMATION

- Code number: MSP4D-[1][2][3]-[4]R
- Specify a code from below for each [1] through [4].  
(e.g. MSP4D-271-CR)

#### [1] STROKE

- 1: 5 to 10 mm (.20" to .39")  
2: 8 to 15 mm (.31" to .59")

#### [2] OPERATION TIME, THRUST

- 6: 24 sec. / 10 mm, 500 N  
7: 30 sec. / 10 mm, 700 N

#### [3] OUTPUT STEM TYPE

- 6: M6 female thread, 0.75 pitch  
8: M8 female thread, 1.0 pitch  
1: M10 female thread, 1.25 pitch

- D: M6 female thread, 1.0 pitch  
E: M8 female thread, 1.25 pitch  
F: M10 female thread, 1.5 pitch

#### [4] CE MARKING

- C: With  
0: Without

#### POWER INPUT

##### DC Power

R: 24 V DC

(Operational voltage range 24 V  $\pm$ 10 %, ripple 10 %p-p max.)

#### GENERAL SPECIFICATIONS

**Degree of protection:** IP55 (IP67 connector)

**Action:** Direct or reverse (factory set to "reverse")

(In "reverse" action, the output stem is retracted with an input signal increase.)

**Operation at a communication error:** Extend, retract or stop (DIP SW selectable; factory set to "stop")

**Node address:** 0 - 63; DIP SW selectable

**Baud rate:** 125 k, 250 k, 500 k bps (DIP SW selectable; factory set to 125 kbps)

##### Circuit connection

**Communication:** 5-core microconnector, male

**Power:** 4-core microconnector, male

**Transmission cable:** Approved for DeviceNet (e.g. OMRON DCA1)

**Power input cable:** With connector (e.g. OMRON XS2F or XS2WD42)

**Housing material:** Cast aluminium

**Drive:** Stepping motor

**Position detection:** Potentiometer

**Isolation:** Communication to power

**Zero adjustment:** 0 - 25 %

**Span adjustment:** 50 - 100 %

**MS (Module Status) indicator:** bi-color (green/red) LED indicates device status.

**NS (Network Status) indicator:** bi-color (green/red) LED indicates status of the communication link.

**Manual operation:** Not available

#### OUTPUT SPECIFICATIONS

**Operation time & thrust (at rated power voltage)**

MSP4D-x6: 24 seconds / 10 mm, 500 N (112 lbs)

MSP4D-x7: 30 seconds / 10 mm, 700 N (157 lbs)

#### INSTALLATION

##### Power Consumption

- DC power input: Approx. 0.5 A



**Operating temperature:** -5 to +55°C (23 to 131°F)

**Operating humidity:** 30 to 85 %RH (non-condensing)

**Vibration:** 0.5 G max.

**Mounting position:** All directions

Do not mount the actuator with its output stem or cable connector on the upside if the actuator is to be exposed to dripping water.

**Weight:** 1.5 kg (3.3 lbs)

## PERFORMANCE

**Resolution:** 1/1000 or 0.015 mm, whichever is greater, with 0.1 % deadband setting

**Insulation resistance:**  $\geq 100 \text{ M}\Omega$  with 500 V DC  
(communication [except drain] to power or metallic housing)

**Dielectric strength:**

1500 V AC @ 1 minute (communication [except drain] to power or metallic housing)

100 V AC @ 1 minute (power to metallic housing)

## STANDARDS & APPROVALS

**CE conformity:**

EMC Directive (2004/108/EC)

EMI EN 61000-6-4: 2007

EMS EN 61000-6-2: 2005



**COMMUNICATIONS**

| ITEM              | ACCESS    | FUNCTION  | RANGE  |
|-------------------|-----------|---|--|
| Remote/Local      | Get       | Confirm Communication/Manual SW Setting<br>Shows the switch position on the control circuit board of the actuator.<br>No control over the communications network available when the switch is set to Manual.                    | 0 : Remote<br>(communication)<br>1 : Local (manual)  |
| RunEnable         | Set / Get | Start Running<br>"Input as Target," "ForcedRetracting" and "ForcedExtending" enabled when this signal is set to "1."  | 0 : Stop<br>1 : Start  |
| Input as Target   | Set / Get | Target Position Input<br>The set value equal to the output stem position setpoint if no scaling is performed. The setting is overridden if "ForcedRetracting" or "ForcedExtending" is ON.                                       | Range: -50 to 10050<br>( $\times 0.01\%$ );<br>0.1% resolution; lesser digits are disregarded. |
| Present Position  | Get       | Position Output<br>0% = Extended; 100% = Retracted<br>These relations do not change by "Direction" setting.   | Range: -50 to 10050<br>( $\times 0.01\%$ )   |
| Allowable DEVN    | Get       | Position Achieved<br>"1" is output when the output stem is inside the deadband.   | 0 : Out of deadband<br>1 : Stable within deadband  |
| DeadBand          | Set / Get | Set Deadband<br>Deadband is adjustable from 0.1 to 9.9%, in 0.2% increments such as 0.1, 0.3, 0.5, ... 9.7 and 9.9%. Fractions are dropped.   | Range: 10 to 1000<br>Default: 50 ( $\times 0.01\%$ )   |
| RestartLMTG TMR   | Set / Get | Restart Limiting Timer<br>The output stem does not restart before the set time once it is stopped.  | Range: 0 to 255<br>Default: 0 ( $\times 0.1$ sec.)   |
| Forced Retracting | Set       | Forced Positioning Input<br>Output stem forced to the position specified with "ForcedRETR End."<br>"Input as Target" setting is overridden.   | 0 : OFF<br>1 : ON<br>Default: 0  |
| Forced Extending  | Set       | Forced Positioning Input<br>Output stem forced to the position specified with "ForcedEXTND End."<br>"Input as Target" setting is overridden.  | 0 : OFF<br>1 : ON<br>Default: 0  |
| ForcedRETR End    | Set / Get | Set Forced Position<br>The targeted output stem position when "ForcedRetracting" is ON.   | Range: 0 to 10050<br>Default: 10000 ( $\times 0.01\%$ )  |
| ForcedEXTND End   | Set / Get | Set Forced Position<br>The targeted output stem position when "ForcedExtending" is ON.  | Range: -50 to 10000<br>Default: 0 ( $\times 0.01\%$ )  |
| Signal at RETR    | Get       | Full Open / Close Signal<br>ON when the stem position is over "RETR SIG POSN" setting.  | 0 : OFF<br>1 : ON  |
| Signal at EXTND   | Get       | Full Open / Close Signal<br>ON when the stem position is below "EXTND SIG POSN" setting.  | 0 : OFF<br>1 : ON  |
| RETR SIG POSN     | Set / Get | Set Full Open / Close Position<br>"Signal at RETR" turns ON when the stem position is over this setting.  | Range: 0 to 10050<br>Default: 9800 ( $\times 0.01\%$ )   |
| EXTND SIG POSN    | Set / Get | Set Full Open / Close Position<br>"Signal at EXTND" turns ON when the stem position is below this setting.  | Range: -50 to 10000<br>Default: 200 ( $\times 0.01\%$ )  |
| Error             | Get       | Confirm Error<br>One or more items among "Motor Deadlock," "Illegal Input" and "Memory Fault" are true.   | 0 : Normal<br>1 : Error  |
| Motor Deadlock    | Get       | Motor Deadlock Error<br>The actuator stops power supply to the motor if the motor cannot be restarted after it tries to for the number of preset "Retry" times in series.<br>Reset by "ClearDeadlockSIG."                       | 0 : Normal<br>1 : Error  |
| Illegal Input     | Get       | Illegal Target Position Input<br>The target position set to a value out of the range from -50 to 10050.   | 0 : Normal<br>1 : Error  |
| Memory Fault      | Get       | Memory Fault<br>The memory on the actuator control circuit board is in error.<br>The actuator operation is disabled.  | 0 : Normal<br>1 : Error  |
| ClearDeadlockSIG  | Set       | Clear Deadlock Signal<br>Reset "Motor Deadlock." Return the signal to "0" after this operation, otherwise "Motor Deadlock" remains disabled and the actuator retries to drive the motor until the cause of deadlock is removed. | 0 : Disabled<br>1 : Clear<br>Default: 0  |



# MODEL: MSP4D

| ITEM                        | ACCESS    | FUNCTION   | RANGE  |
|-----------------------------|-----------|--|--|
| Retry                       | Set / Get | Set Retry Times<br>The actuator tries to restart for the number of preset "Retry" times.   | Range: 1 to 255<br>Default: 5  |
| IllegalInputOPN             | Set / Get | Illegal Input Operation<br>Set the actuator's operation in case of an illegal input.   | 0 : Input limit position<br>1 : Stop<br>2 : 0% position<br>3 : 100% position<br>Default: 0 |
| COMM ErrorOPN               | Get       | Confirm Communication Error Operation Setting<br>Shows the communication error operation setting on the control circuit board of the actuator.   | 0 : Stop<br>1 : 0% position<br>2 : 100% position   |
| COMM FaultTime              | Set / Get | Set Stand-by Time Before Starting Communication Error Operation<br>The time to wait in case of a communication error before starting the pre-designated operation.                                   | Range: 10 to 255<br>Default: 10 (sec.)   |
| Direction                   | Set / Get | Set Input Action<br>Direct action: 100% output at 0% input<br>Reverse action: 0% output at 0% input<br>Not related to relations between Present Position (position output) and actual stem position. | 0 : Reverse<br>1 : Direct<br>Default: 0  |
| MIN input                   | Set / Get | Position Target Input Limit<br>Set the lower limit of "Input as Target."<br>Any input below the setpoint is clamped to the set value.  | Range: -50 to 10000<br>Default: -50 ( $\times 0.01\%$ )                                    |
| MAX input                   | Set / Get | Position Target Input Limit<br>Set the upper limit of "Input as Target."<br>Any input above the setpoint is clamped to the set value.  | Range: 0 to 10050<br>Default: 10050 ( $\times 0.01\%$ )                                    |
| Input as Zero               | Set / Get | Input Scaling (such as for Split Control)<br>"Input as Target" value for 0% output stem position setpoint.   | Range: -50 to 10000<br>Default: 0 ( $\times 0.01\%$ )                                      |
| Input as Full               | Set / Get | Input Scaling (such as for Split Control)<br>"Input as Target" value for 100% output stem position setpoint.   | Range: 0 to 10050<br>Default: 10000 ( $\times 0.01\%$ )                                    |
| DeadlockCNTR                | Set / Get | Deadlock Counter<br>Shows the totalized number of Retries at a deadlock.   | Range: 0 to 65535 ( $\times 1$ )   |
| LastDeadlockPOSN            | Get       | Confirm Motor Deadlock Position<br>Shows the output stem position at the last deadlock.  | Range: -50 to 10050<br>( $\times 0.01\%$ )<br>Default: 32767<br>(invalid data)             |
| StartingCNTR * <sup>1</sup> | Set / Get | Motor Starting Counter<br>Shows the totalized number of starting the motor.  | Range: 0 to 4294967295<br>( $\times 1$ )   |
| TurnOverCNTR * <sup>1</sup> | Set / Get | Motor Reversing Counter<br>Shows the totalized number of reversing the motor direction.  | Range: 0 to 4294967295<br>( $\times 1$ )   |
| Accumulated MVT *<br>*      | Set / Get | Accumulated Running Distance<br>Shows the accumulated running distance. 100% span defined with Zero and Span adjustments on the PCB.   | Range: 0 to 4294967295<br>( $\times 0.1\%$ )   |

\* Data stored every 10 minutes.



